 
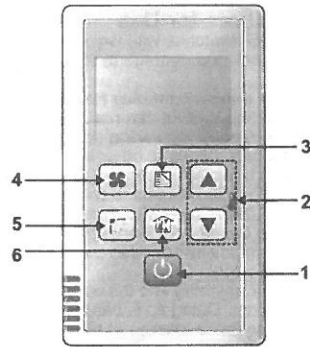 


2. Names and Operations

Operation Section

- (Start/Stop) button**
Pushing this button starts, and pushing again stops the unit.
 - (Temperature setting) buttons**
Changing the temperature setting.
 - (Mode Select) button**
Pushing this button to select an operation mode. (AUTO → HEAT → DRY → COOL → FAN).
 - (Fan speed) button**
Changing the fan speed.
(/ / /)
 - (Swing/Air direction) button *1**
Use this button to set the auto swing or air direction to a specific angle.
- *1 Do not move the flap (vertical airflow adjustment board) with your hand.
- The flap is automatically directed down when the unit is stopped.
 - The flap is directed up during the HEAT standby. The flap starts swinging after the HEAT standby is cancelled, although the AUTO flap indication on the remote control unit is displayed during the HEAT standby.

- (Outing function) button**
(Outing Function)

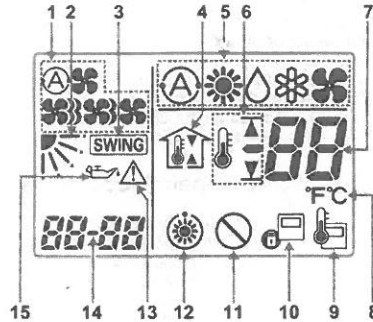

EN-2

Display Section

- (Fan mode select) indication**
The selected fan mode is displayed.
- (Flap position) indication**
Indicates the flap position.
- SWING (Swing) indication**
Appears while the flap swings.
- (Outing) indication**
(Outing Function)
Appears when the outing function is set.
- Operation Mode indication**
Displays the selected operation mode. (AUTO / HEAT / DRY / COOL / FAN).
- Upper and lower limit indication of the outing function**
 : Indicates the upper limit of the temperature
 : Indicates the lower limit of the temperature
- Temperature indication**
Indicates the set temperature.
- °F / °C (Temperature unit) indication**
- (Remote control sensor) indication**
Appears when the remote control sensor is used.
- (Centralized control) indication**
Appears when operated in centralized control. If the remote control operation is not permitted to the remote unit, when the (Start/Stop) button, (Mode select) button, (Fan speed) button, (Swing/Air direction) button or (Temperature setting) buttons are pressed, flashes and rejects the change.
- (Disabled feature) indication**
Displayed if the selected feature was disabled during installation.
- (Heating standby mode) indication**
 appears when the fan of the indoor unit is stopped or in low fan speed.
- (Caution) indication**
Appears when the protective device is activated or when an abnormality occurs.
- Alarm indication**
This displays alarm messages when an error occurs.
- (Oil) indication**
Appears when the engine oil needs to be changed. (Appears when the gas heat pump air conditioner is used.)

EN

EN-3